

### **30280 Automatic Center Punch - Cleaning Instructions:**

Disassemble the Automatic Center Punch. Use a clean dry cloth to wipe the Guide, Firing Pin, and Punch and Ring Assembly. Debris inside the mechanism may cause the tool to misfire. Reassemble the tool as shown below. The Guide has a flat end and a concave end. The concave end must be toward the Firing Pin.

Important: Do not use any lubricant when assembling the Automatic Center Punch.

