



# INSTRUCTIONS FOR PULLEY PULLER



**Important: Keep puller screw and bearing lubricated.**

**Removal from Shafts not Requiring Special Adapters - See Illustration A**

1. Thread hub (2) onto puller screw (3). See **Instruction 1** drawing.
2. Push general purpose removing adapter (4) into puller screw (3). See **Instruction 2** drawing.
3. Install body (1) over hub (2) and pulley groove. Use the end of body that best fits the pulley groove. Refer to **Illustration A**.
4. Hand tighten puller screw (3) to clamp puller to pulley.
5. Use 13/16" wrench to hold hub (2) while tightening puller screw (3) with 7/16" wrench or impact tool. Turn until pulley is removed from shaft.

**Parts Breakdown:**

- 1 - Body
  - 2 - Hub
  - 3 - Puller Screw
  - 4 - General Purpose Removing Adapter
  - 5 - Quad 4 Installing Adapter
  - 6 - 3.1 GM Installing Adapter
  - 7 - General Purpose Installing Adapter (Black Oxide)
  - 8 - 3.1 GM Removing Adapter (Short)
  - 9 - Quad 4 Removing Adapter (Long)
  - 10- 8mm Ford Installing Adapter (Zinc Plated)
- Note: Parts shown are in same position in case.**

