


Lisle 15000 Engine Cylinder Hone - Dress Stones Before Use

Check to make sure stones are parallel their full length. Use a caliper and measure across the stones at top, center and bottom.

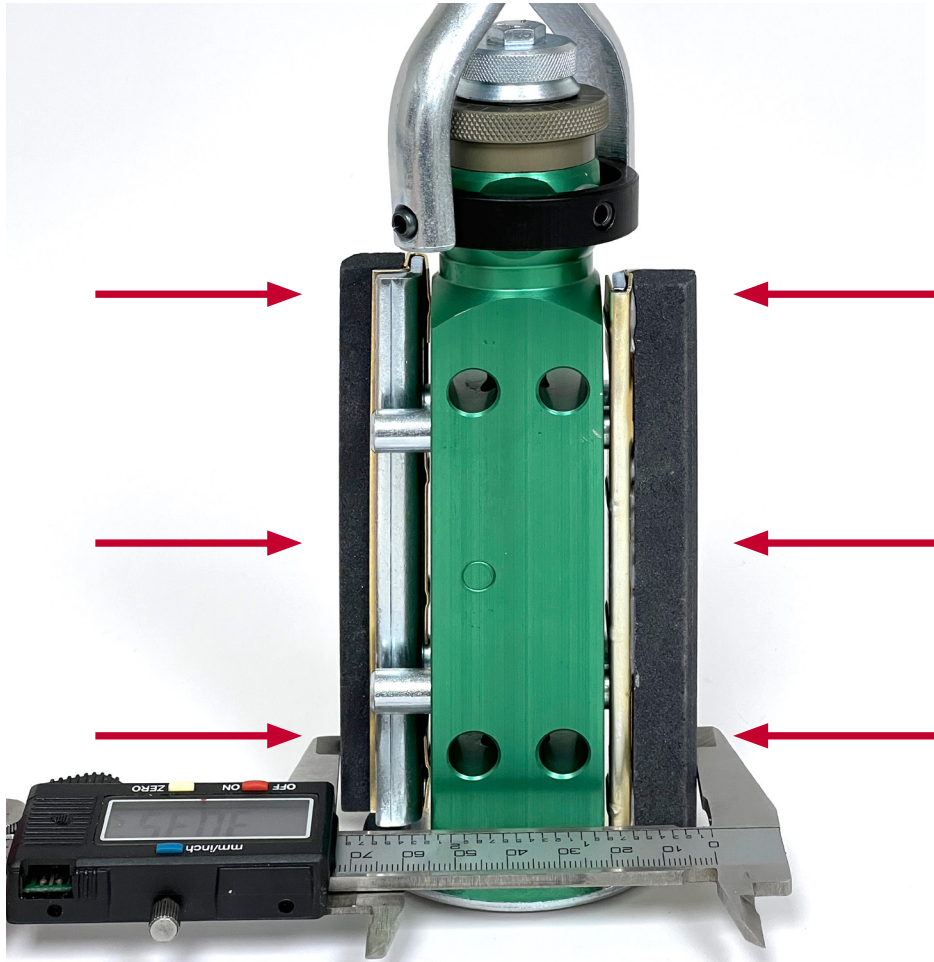

Correct any taper in stones by dressing with the abrasive paddle supplied.